

Model 345 ANIMAL HOUSE™ INSTALLATION INSTRUCTIONS

INSTALLATION AND OPERATING INSTRUCTIONS

Your purchase of a WOLO horn is a perfect choice to compliment your vehicle. Our horns are manufactured with the finest of materials. Each horn is bench tested before it is packaged to assure workmanship and quality, so you will have many years of reliable service.

IMPORTANT: THIS HORN SHOULD NEVER BE USED AS A REPLACEMENT FOR VEHICLE ORIGINAL EQUIPMENT HORN. ADDITIONALLY IT IS NOT TO BE USED AS A WARNING DEVICE, MODEL 345 ANIMAL HOUSE IS FOR OFF THE ROAD AND SHOW USE.

MOUNTING CONTROL BOX

1. Select a mounting location that allows easy access to the knobs and controls on the face of the animal house control box.
2. Mount the angle brackets (supplied) to each side of the ANIMAL HOUSE control box. See fig. (A).
3. Place the ANIMAL HOUSE control box in the selected mounting location. Using the mounting brackets as a template mark location for mounting holes to be drilled.
4. Drill holes (2) on marked locations using a 1/8 drill bit and mount control box with self tapping screws provided. See fig. (B).

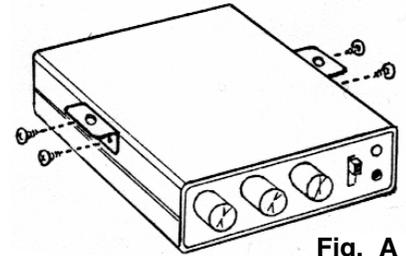


Fig. A

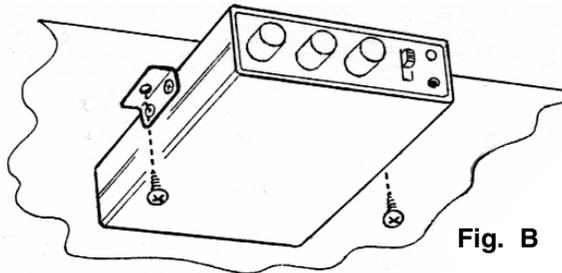


Fig. B

MOUNTING SPEAKER

5. Select a convenient location in the engine compartment that is dry and safe from the engines exhaust manifold heat. Always face the speaker in a downward position. This will help prevent water from entering into the speaker. Using the speakers mounting bracket as a template, mark hole locations (3) and drill using a 1/8 inch drill bit. Secure speaker with self tapping screws provided (3). Make sure that the speakers opening is not blocked by any compartments which could reduce its loudness.

WIRING (Fig. C)

6. **TWIN BLACK** is connected to the speaker in the engine compartment. Route wires through fire wall to speaker. Connect either wire to one of the speaker wires. Then connect remaining wire to other speaker wire.
7. **RED WIRE** is connected to the fuse-block or a under dash wire that has power (+) 12 volts when the ignition is on. A 3 amp inline fuse must be used (included in kit).
8. **SINGLE BLACK WIRE** is grounded. Secure wire under a bolt in the dashboard area, make sure that the METAL surface around the bolt is clean of rust and paint to make a good electrical connection.

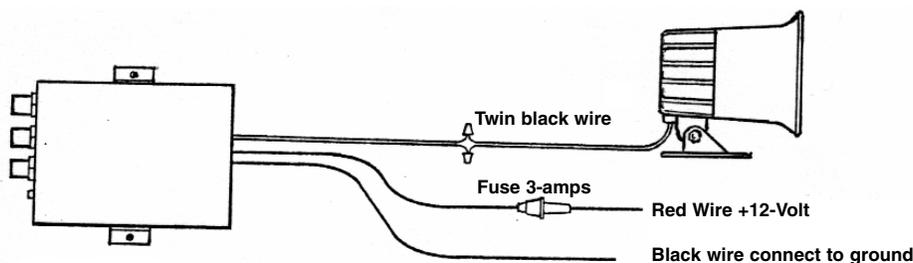


Fig. C

TESTING AND OPERATION

9. Put the vehicles ignition on so to power your ANIMAL HOUSE HORN during testing.
10. Turn the ANIMAL HOUSE VOLUME knob to the right. The red LED power indicator will light to show that the horn is now ON.

A. ANIMAL & MUSICAL: Place the slide switch to the top position. **ANIMAL.** Using the center knob marked **ANIMAL**, you can select (9) different animal sounds and when placed in the music position (50) different chime songs will play continuously. Use the **VOLUME** knob to control loudness.

B. SIREN: Place the slide switch in the middle position. **SIREN.** Using the right knob marked **SIREN**, you can select (10) different siren sounds. Use the **VOLUME** knob to control loudness.

C. PA: Place the microphone jack into the socket marked **MIC**. Place the slide switch into the bottom position marked **PA**. Place the switch located on microphone handle in the ON position. Use the **VOLUME** knob to control loudness.

Our technicians are available to answer your questions, Monday through Friday from 9 AM to 4 PM EST 1 888-550-Horn (4676).

WARRANTY

Wolo Manufacturing Corporation ("Wolo") warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem. Also, include with the return a check or money order in the amount of \$10.00 to cover return shipping.

Mail to:

Wolo Manufacturing Corp. • One Saxwood Street, Deer Park, NY 11729
Attn: Warranty Service • E-mail: tech@wolo-mfg.com