

OPERATING INSTRUCTIONS FOR WOLO SEE-MORE™ MODEL 6000 LED 15-WATT LED WORKLIGHT

Your choice of a Wolo rechargeable work light is the perfect choice for use at home, boating, camping, roadside assistance and etc. Wolo manufactures this product with the finest materials. Each light is tested to meet our high standards before it is packaged, to assure a perfect working light. Our quality workmanship and components are Wolo's assurance of a product that will give years of dependable service. If you need help using

your new Wolo work light, our technicians are available to answer your questions, Monday thru Friday, from 9 AM to 4 PM EST at 1-888-550-4676.

IMPORTANT: Read this instruction sheet before using the work light to ensure safe operation / storage. The Lithium-Ion batteries will last hundreds of safe charge / discharge cycles. Always follow the simple guidelines below and use the same caution and care that would be given to an electronic or electrical device.

TO OPERATE WORK LIGHT:

- 1. Press and release the On/Off button to turn on.
- Press and release the Mode button to select from three (3) different modes: HIGH BEAM • LOW BEAM • FLASHING S-O-S.
- 3. Press and release the On/Off button to turn off.
- 4. When the batteries are fully charged, you should have approximately 4 hours of work time when using the high beam.

TO CHARGE BATTERIES:

IMPORTANT: Use only the 110-volt AC charger or 12-volt power wire with cigarette lighter plug provided to charge the work light's batteries. (The batteries may need to be fully charged before first use).

- 5. The male plug connected to the charger's wire, is inserted into the socket located in the backside bottom of the light.
- 6. Connect the charger to 110-volt AC power source or cigarette lighter plug to 12-volts DC (vehicle's accessory power outlet).
- 7. The LED indicator light located on the front control panel will illuminate RED when charging and will change to green when the batteries are fully charged. Allow approximately 4 hours charge time if the batteries are fully discharged and the work light does not turn on.

NOTE: When using the 110-volt AC charger, you may feel it gets slightly warm to the touch; that is normal.

STORING THE WORK LIGHT:

DO NOT STORE THE WORK LIGHT WITH THE BATTERIES FULLY CHARGED FOR LONGER THAN 3 MONTHS. When storing the work light away for long periods of time without use, drain the batteries down by turning on the work light for about 5 minutes, before storing. Failure to follow this procedure can result in damage to the batteries during long-term storage.



CARE FOR BATTERIES:

The work light's Lithium-Ion batteries will last you for hundreds of safe charge / discharge cycles. The work light is designed to turn off automatically to prevent over draining of the batteries. There is an automatic cut off circuit that will stop charging the batteries when they reach a full charge (4.2 volts) and the charge indicator will illuminate green.

MAGNET BASE:

Built into the light's base is a strong protected magnet that will secure the light to any ferrous metal surface.

HANDLE:

The light has a convenient handle that allows the user to carry or hang the light. When the handle is not needed, it folds away.

DISCLAIMER

The WOLO SEE-MORE work light can generate extremely bright concentrated beams of light! Never look directly at LEDs while the light is turned on. Never shine the light directly into the eyes of others. Permanent eye damage can result from misuse. Rechargeable Lithium Ion batteries are used just like the ones found in laptop computers, cell phones, and cordless power tools. Special precautions should always be taken when charging, discharging, and storing the work light.

- Use only the 110-volt AC charger or 12-volt power wire with cigarette lighter plug provided, to charge 3.7v Li-lon batteries.
- NEVER LEAVE BATTERIES CONNECTED TO CHARGER UNATTENDED.
- NEVER ALLOW BATTERIES TO BECOME OVERHEATED. Never allow the batteries to heat to a temperature over 158°F (70°C). Li-Ion Batteries can vent electrolyte or explode.
- NEVER SUBMERGE BATTERIES IN WATER OR EXPOSE TO WET CONDITIONS.
- NEVER DISASSEMBLE BATTERIES. If a replacement batteries are needed, only use an exact replacement, Wolo part number 6000B available from Wolo by calling: 888-550-4676 Monday-Friday 9:00 AM – 4:00 PM EST.
- ALWAYS KEEP WORK LIGHT AND ITS BATTERIES AWAY FROM CHILDREN.
- ALWAYS KEEP WORK LIGHT AND ITS BATTERIES AWAY FROM OPEN FLAME.

WARRANTY

Wolo Manufacturing Corporation ("Wolo") warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHERARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem with a daytime telephone number. Also, include with the return a check or money order in the amount of \$10.00 to cover return shipping. Mail to:

Wolo Manufacturing Corp.

Attn: Warranty Service One Saxwood Street, Deer Park, NY 11729 E-mail: tech@wolo-mfg.com