

INSTALLATION INSTRUCTIONS

MODEL 355 DING DONG CITY BELL

Your purchase of a DING DONG CITY BELL is a perfect choice to complement your vehicle. Wolo's products are manufactured with the finest materials. Each bell is bench tested before it is packaged. If you need help installing your bell, our technicians are available to answer your questions, Monday thru Friday, 9:00 AM to 4:00 PM EST at 888-550-HORN (4676).

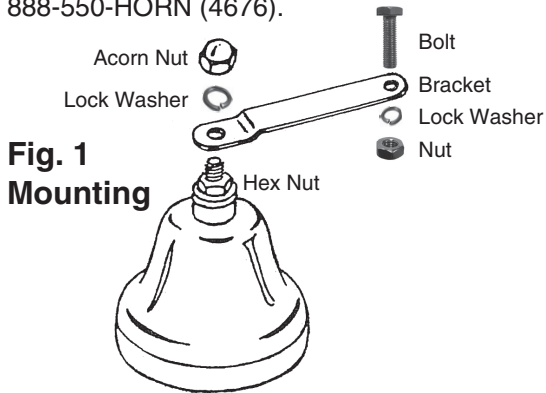


Fig. 1
Mounting

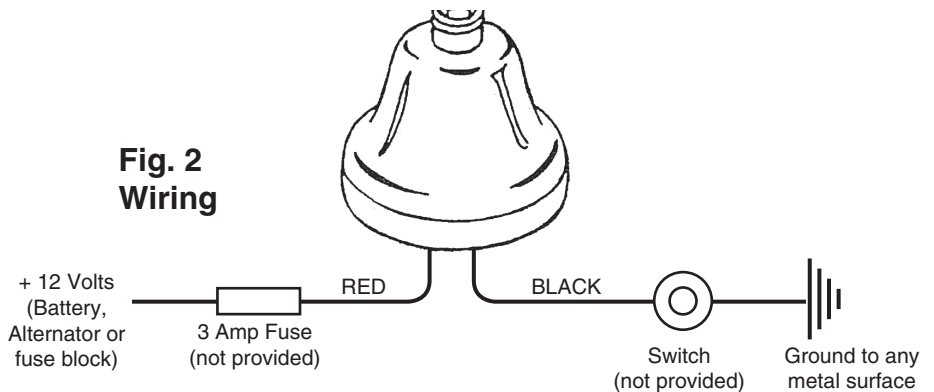


Fig. 2
Wiring

MOUNTING Fig 1:

1. Locate a mounting location that is dry and safe from the extreme heat from the engine's exhaust manifold.
2. Drill a 5/16" hole at the selected mounting location. **IMPORTANT:** Inspect both sides of the mounting surface before drilling to ensure there are no hoses, wires or component parts that could be damaged.
3. Place the mounting bracket onto the bell's threaded bolt and secure bracket using the acorn nut provided.
NOTE: Do not fully tighten the acorn nut until the mounting bracket has been installed to the vehicle.
4. Mount the bell's bracket to the vehicle using the hardware provided.
5. Secure the bell to the bracket by tightening the acorn nut and the hex nut that is located under the mounting bracket.
NOTE: The hex nut was factory installed onto the bell's threaded bolt.

WIRING Fig 2:

6. **BLACK WIRE:** Is connected to the bell switch. The bell switch will have two terminals, connect the bell's black wire to either terminal.
7. **RED WIRE:** Is connected to (+) 12-volt such as the vehicle's battery, alternator or fuse block. **IMPORTANT:** Always protect this circuit with a three (3)-amp fuse, (not included). For maximum protection connect the fuse at the power source.
8. **BELL SWITCH:** The bell switch's other terminal is connected to ground by securing a wire under any metal body bolt or the negative (-) battery post. **IMPORTANT:** Make sure that the METAL ground surface and the bolt that secures the wire is clean of rust, oxidation and paint to ensure a good electrical connection.

IMPORTANT: If you need to lengthen the bell wires, use 20 gauge or heavier wire.

Installation is complete.

HOW TO USE BELL:

9. Press the bell switch once and release and the cell will gong once.
10. Press the bell switch; the bell will gong repeatedly until the switch is released.

Warranty

Wolo Manufacturing Corporation ("Wolo") warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem. Also, include with the return a check or money order in the amount of \$20.00 to cover return shipping. Mail to:

Wolo Manufacturing Corp.
One Saxwood Street, Deer Park, NY 11729
Attn: Warranty Service