

Installation and Operating Instructions for E-Z HORN™ Hand Held Electronic Horn Model 496

Your purchase of a Wolo E-Z Horn™ is the perfect choice for personal signaling. Made with state-of-the-art electronics throughout and skillfully manufactured to provide years of dependable service. If you require assistance installing your new Wolo horn, our technicians are available to answer your questions, Monday through Friday from 8 AM to 4 PM EST 1-888-550-HORN (4676).

BATTERY INSTALLATION

Fig. A

1. Open the battery compartment door by pushing down on the tab.

Fig. B

2. Connect a 9-volt battery, (type 6LR61) to the E-Z Horn's battery plug, (battery not provided). Use an alkaline type battery if you require reliable, long lasting life.
3. Insert the battery and wires into compartment.
4. Close the battery compartment door by pushing it firmly into place. You should hear the latch snap, when the battery door is secured in place
5. Your E-Z Horn is ready to use. To turn ON depress the red switch trigger. Release the switch trigger to turn E-Z Horn off.
6. To ensure that your E-Z Horn is always ready for use, store a new battery in the spare battery compartment.

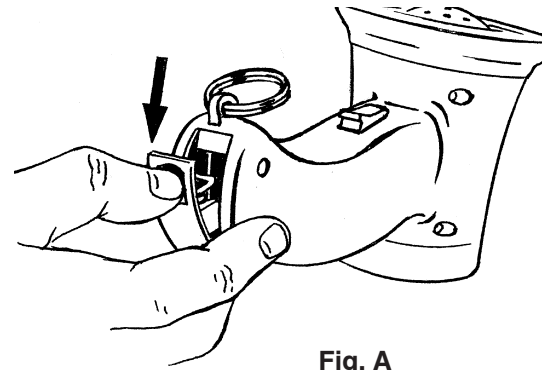


Fig. A

A stainless steel belt-clip is provided for easy carrying of the horn. When the E-Z Horn™ is required, simply press the tab of the belt-clip to release.

A hand lanyard strap is provided for a secure grip of the horn in any environment.

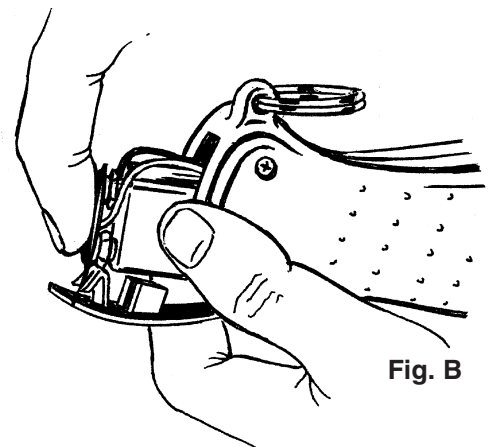


Fig. B

IMPORTANT: ALWAYS USE EAR PROTECTION WHEN THE E-Z HORN IS USED. NEVER PLACE THE E-Z HORN CLOSE TO A PERSON'S EAR. NEVER LEAVE THE HORN UNATTENDED WHEN CHILDREN ARE PRESENT.

WARRANTY

Wolo Manufacturing Corporation ("Wolo") warrants to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem. Also, include with the return a check or money order in the amount of \$10.00 to cover return shipping. Mail to:

Wolo Manufacturing Corp. • One Saxwood Street, Deer Park, NY 11729
Attn: Warranty Service
E-mail: tech@wolo-mfg.com

©2007 Wolo Mfg. Corp.
All Rights Reserved