

Model 4003 100-Watt / 8 Ohm Compact Siren Speaker

INSTALLATION INSTRUCTIONS

INSTALLATION AND OPERATION INSTRUCTIONS

Your purchase of a WOLO product is a perfect choice to compliment your vehicle. Our products are manufactured with the finest of materials. Each speaker is bench tested before it is packaged to assure workmanship and quality, so you receive years of reliable service. If you need help with installation or in using your new Wolo speaker, our technicians are available to answer your questions, Monday thru Friday, from 9 AM to 4 PM EST at 1-888-550-4676.

MOUNTING SPEAKER Fig. A

Select a mounting location in vehicle's engine compartment that is dry and safe from the heat produced from the engine's exhaust manifold. To ensure the siren functions to maximum loudness, make sure the front of the speaker is not blocked. When possible, position the speaker facing downward which will help prevent water from entering into the front of the speaker. **IMPORTANT:** Before drilling any surface for mounting speaker or for routing wires, carefully inspect the desired location to ensure that there are no components, wires and or any other vehicle part that could be damaged by drilling. Also, wire routing must be out of the deployment path of vehicles air bags.

1. Using the speaker's swing mounting bracket as a template, mark the hole locations and drill to size using a 1/4 inch drill bit.
2. The height of the swing bracket can be adjusted for different mounting positions by selecting the appropriate hole location.
3. Secure the speaker to mounting surface with hardware provided.

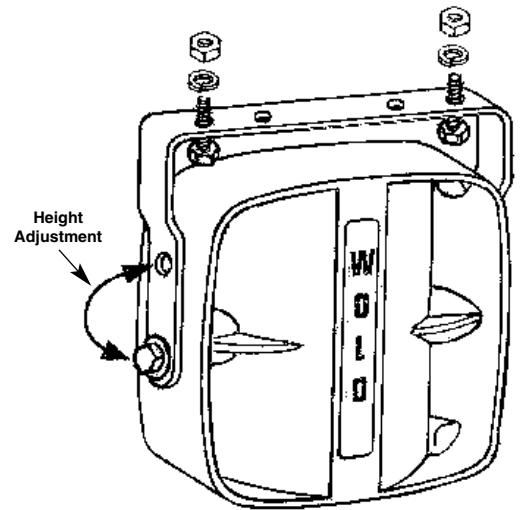


Fig. A

WIRING

4. Connect either of the sirens audio output wires to one of the speaker's wires. Then connect the remaining siren audio output wire to the other speaker wire. If you need to route the wires or harness through the vehicle firewall or roof depending on the speaker's mounting location. Make sure that the hole the wires are being passed through does not have sharp edges that could cut into the plastic insulation of the wire. **IMPORTANT:** Make sure all connections are taped and wires are secured.

Warranty

Wolo Manufacturing Corporation ("Wolo") warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem. Also, include with the return a check or money order in the amount of \$10.00 to cover return shipping. Mail to:

Wolo Manufacturing Corp. One Saxwood Street, Deer Park, NY 11729
Attn: Warranty Service E-mail: tech@wolo-mfg.com