

INSTALLATION INSTRUCTIONS

MODEL 001, 002 & 003 – MUSIC TIME®

Property installed “Music Time” will provide years of high quality sound. Give your installation the same care and attention that went into making this fine product. Once installed Music Time requires no maintenance.

MOUNTING THE MUSICAL SPEAKER

Carefully select a position in the engine compartment that will keep the speaker and the electronics dry. Equally as important, protect the plastic speaker housing by not allowing it to come in contact with hot engine parts.

With the mounting position located, use the musical speaker as a template, and mark the location of the four mounting holes. Drill 4 holes using a 7/32-drill bit. Remove the mounting bracket from the speaker and fasten the bracket to the vehicle using the hardware provided. Secure the speaker to the mounting bracket, tilting speaker housing slightly downward to prevent water from collecting in speaker cone.

WIRING

Music Time will be ready to work after making only two electrical connections. Connect the fuse wire to any electrical circuit that is powered when the ignition is “on”. Secure the wire with the ring terminal under a speaker-mounting bolt or to any convenient body bolt.

CONTROLLER

Four buttons on the key chain transmitter provides Music Time with full control of all sound functions. Button functions: The “Large” button turns the system on and off. “Red and Blue” buttons select songs, and volume button adjusts the sound level.

WARRANTY

Wolo Manufacturing Corporation (“Wolo”) warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

Note: *If your transmitter should ever be misplaced, a new unit is available for \$28.65. This price includes postage. When ordering by check, allow 10 days. Using a credit card or money order will make expedited delivery. Please be sure to include your name, address with zip number and, also the system’s 3-digit code number located on the rear of the speaker.*

Your sound system is guaranteed to be free of defective components or a failure due to workmanship for 90 days from the date of purchase. If service should be required, return the speaker and transmitter to the address below, with the dated receipt of purchase. Include a check or money order for ten dollars (\$10.00) to cover shipping. Do not void guarantee by removing rear speaker cover in an attempt to make repairs.

Have any questions, call our help line: 1-888-550-4676

WOLO MANUFACTURING CORP.
One Saxwood Street, Deer Park, NY 11729
[E-mail: tech@wolo-mfg.com](mailto:tech@wolo-mfg.com)

© 2006 Wolo Mfg. Corp All Rights Reserved.