

BACK-UP ALARM


ALARMA PARA REVERSA

MOUNTING

1. Find a location for the alarm under rear of vehicle in an area which will stay dry and safe from exhaust system.
2. Using the alarm's mounting bracket as a template, drill one (1) 5/16" inch hole.
3. Clean the metal surface around the mounting hole to be free of rust and paint to assure a good ground connection with the back-up alarm's mounting basket.
4. Splice the alarm's red wire to the vehicles back-up bulb's power wire. The back-up bulb and its wire are located behind the white lense. Tape splice connection and secure wires.

MONTAJE

1. Busque un lugar para la alarma debajo de la parte posterior del vehículo donde permanezca seca y libre del sistema de escape.
2. Usando el soporte de montaje de la alarma como plano taladre un (1) agujero de 8mm (5/16).
3. Limpie la superficie de metal alrededor del agujero para que este libre de óxido y pintura para asegurar una buena conexión a tierra con el soporte de montaje de la alarma de reversa.
4. Conecte el cable rojo de la alarma al cable de poder del faro de reversa. El faro de reversa y el cable están localizados detrás de la cubierta blanca. Asegure con cinta aislante la conexión de los cables.

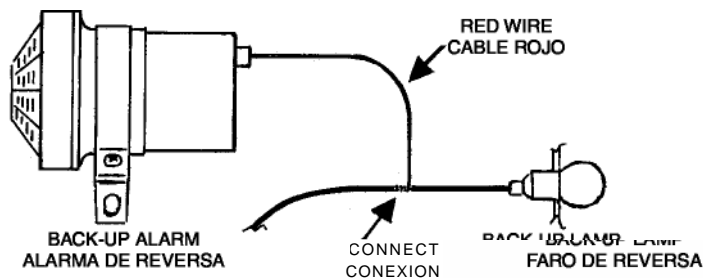

MANUFACTURING CORP.
Deer Park, New York 11729

Web Site/Sitio Web: <http://www.wolo-mfg.com>

E-Mail/Correo Electronico: wolo@wolo-mfg.com

Importador: Ver Producto.

©2003 Wolo Mfg. Corp. All Rights Reserved

