



INSTALLATION INSTRUCTIONS

MODELS 270-2T & 275-2T

Your purchase of a Wolo horn is a perfect choice to compliment your vehicle. Wolo's products are manufactured with the finest materials. Each horn is tested to ensure it meets all manufacturing specifications before it is packaged. If you need help installing this product, our technicians are available to answer your questions, Monday through Friday from 9 AM to 4 PM EST. by calling 1-888-550-HORN (4676).

MOUNTING FIG. 1

1. Remove the factory horn and install your new Wolo horn in the same position with the horn facing downward so to prevent dirt and water from entering the horn. Secure the horn to the vehicle using the bracket and hardware provided.

IMPORTANT: For one (1) terminal factory horn system, the grounding jumper wire provided needs to be secured under the mounting bolt before securing the horn to a metal body grounding surface. Fig. 2



TWO (2) TERMINAL WIRING FIG. 1

2. For vehicles that have a factory horn with two (2) terminals, simply transfer the factory horn wires to your new Wolo horn. **NOTE:** it doesn't make a difference which horn terminal is used when transferring the wires to your factory horn. **IMPORTANT:** Always make sure that there is a 5-amp fuse used in the horn circuit to protect the vehicle. If the wire terminals that were connected to your vehicle's horn wires don't connect to your new Wolo horn, provided in the kit are two (2) 1/4" push-on insulated terminals. The installation is complete, and the horn is ready to be used.

ONE (1) TERMINAL WIRING FIG. 2

3. For vehicles where the factory horn has one (1) terminal. Transfer the factory horn wire to your Wolo horn. It doesn't make a difference which horn terminal is used when transferring the wire from your factory horn to your Wolo horn.
4. Using the grounding wire provided, place the loop end under the mounting bolt of the horn and firmly tighten. Make sure the horn's mounting bracket is secured to a metal body surface that is clean of paint and rust.
5. Attach the grounding wire's female 1/4" push-on terminal to the horns unused terminal.

IMPORTANT: Always make sure that there is a 5-amp fuse used in the horn circuit to protect the vehicle. Installation is complete. If the wire terminal that was connected to your vehicle's factory horn doesn't connect to your new Wolo horn, provided in the kit are two 1/4" push-on insulated terminals.

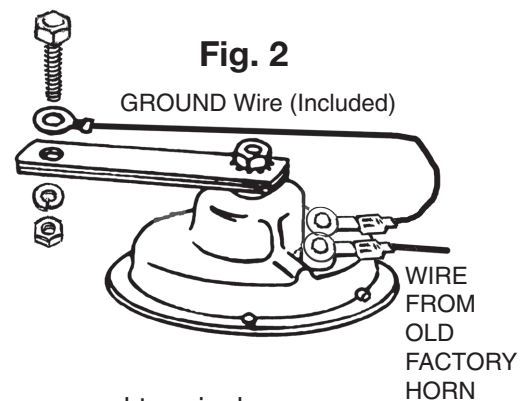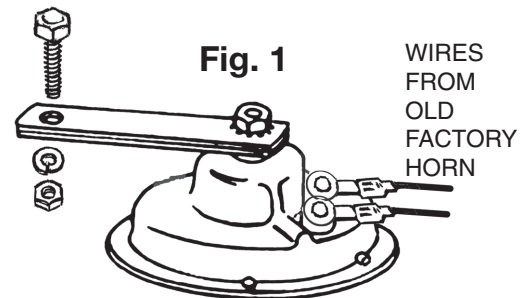

WARRANTY

Wolo Manufacturing Corporation ("Wolo") warrants the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as provided above and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem with a daytime telephone number. Also, include with the return a check or money order in the amount of \$20.00 to cover return shipping.

Mail to:

Wolo Manufacturing Corp.

Attn: Warranty Service
One Saxwood Street
Deer Park, NY 11729